

ULTRASONIC ANIMALCHASER

Chases Unwanted Animals out of your Garden and Yard Day and Night!

Ultrasonic **AnimalChaser** is the most humane and environmentally friendly way of keeping gardens, lawn and yard free of unwelcome animals (dogs, cats, squirrels, outdoor rodents, martens, monkeys, bats, pigeons, foxes, deer, etc.) without harming them.

CHARACTERISTICS

Ultrasonic **AnimalChaser** projects 130 dB of ultrasound at frequency range of 20,000 Hz to 42,000 Hz. Combined with the unique design of variable sound waves, intruding creatures will not become immune to the emissions from Ultrasonic **AnimalChaser**.

Ultrasonic **AnimalChaser** protects an area of approximately 175 square meters of unobstructed space in a fan shape outdoors, with a radius of about 15 meters in a 90 degree arc. And can be used indoors to permanently protect a given area from dog and cat intrusion. Ultrasonic **AnimalChaser** includes a main unit, an adapter, a 5.5 meters extension cord and a specially designed mounting shelter.

You may mount the Ultrasonic **AnimalChaser** to the wall outside of your building on a ledge or attach it to a post. A red LED indicator will be on after plugging in to indicate the proper operation of Ultrasonic **AnimalChaser**. Although the unit is weather-resistant, it is recommended to remove the main machine from the mounting shelter if storms or heavy rain are expected.

The ultrasonic sound emitted cannot be heard by humans but is uncomfortable to animals, whose only reaction is to move away. The Ultrasonic **AnimalChaser** is connected to a non-hazardous low voltage power supply.

HOW TO INSTALL:

1. Remove the main module from the mounting shelter by inserting a thin, blunt blade between the back of the unit and twisting gently. The module will slide out.
2. Mount the shelter between 30 and 90 cm from the ground to a post of wall within 7 meters of a power socket. There is no need to use the extension cord if the unit is to be mounted less than 1.8 meters from the socket.
3. Replace the main module by pushing it into the mounting shelter.
4. Connect the extension cord and adapter with the main module.
5. After plugging in the adapter, the red LED will be on to indicate the Ultrasonic **AnimalChaser** is operating properly.

PLEASE NOTE:

Any obstacles e.g. trees, bushes, in front of the Ultrasonic **AnimalChaser** will limit the effects of the ultrasonic waves.

Do not immerse the Ultrasonic **AnimalChaser** in water or any other liquid.



Do not modify or tamper with the unit's internal components. Covering or painting over the front speaker can damage the device and cause it to malfunction.

Remove the main module from the mounting shelter when a storm or heavy rain is expected.

Turn off the device by pulling out the adapter if your pet is playing around the protected area.

SPECIFICATION:

Dimension	: 145 x 138 x 82 m/m
Weight	: 255 g (excluding adapter & extension cord)
Power supply	: 100- 240 VAC, 50/60 cycles
Power consumption	: 1 ½ watts
Frequency range	: 20,000 Hz to 42,000 Hz (continuously variable)
Output sound pressure	: 130 dB
Effective range	: approx. 175 square meters unobstructed

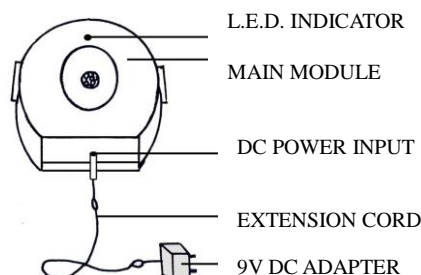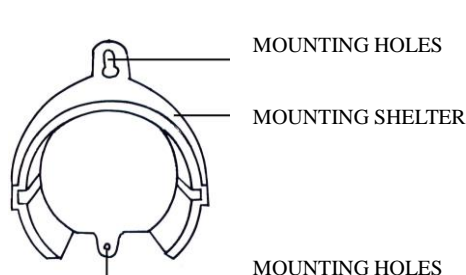

HOW THE ULTRASONIC ANIMAL CHASER WORKS:

